 


MODEL(S): 8001AU v04

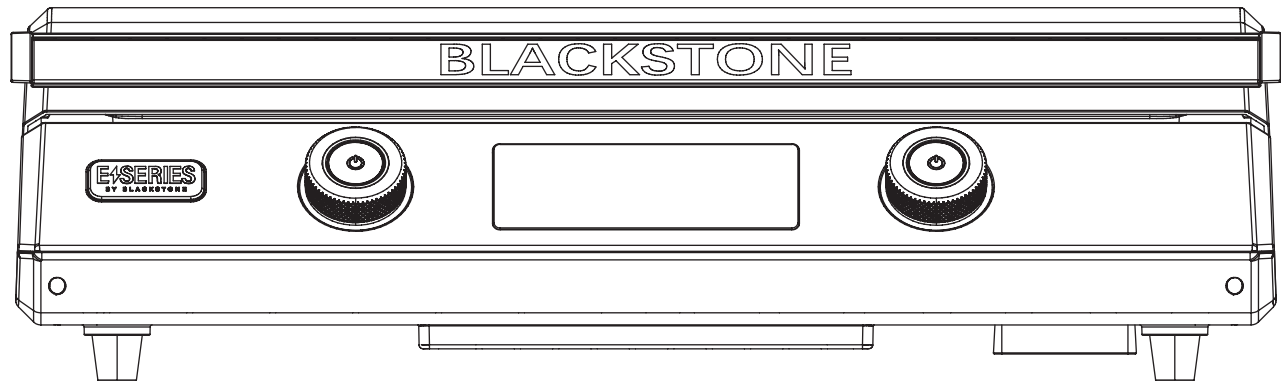

OWNER'S MANUAL

22" ELECTRIC GRIDDLE

TABLE OF CONTENTS

IMPORTANT SAFETY INFORMATION	02
CUSTOMER SUPPORT	03
ASSEMBLY GUIDE	04
OPERATION INSTRUCTIONS	06

IMPORTANT:

This instruction manual contains important information necessary for the proper assembly and safe use of the appliance.

Read and follow all warnings and instructions before assembling and using the appliance.

Follow all warnings and instructions when using the appliance.

Keep this manual for future reference.

Installer/Assembler: Leave these instructions with the consumer.

SAFETY ALERT KEY

⚠ DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

⚠ CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

⚠ WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

NOTICE

Indicates information considered important, but not hazard-related (e.g. messages related to property damage).



IMPORTANT SAFETY INFORMATION

IMPORTANT SAFEGUARDS – READ ALL INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- DO NOT touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- DO NOT place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- DO NOT use appliance for other than intended use.
- DO NOT clean this product with a water spray or the like.

POWER CORD INSTRUCTIONS

- The appliance must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.
- The appliance is to be connected to a socket-outlet having an earthing contact.
- Always attach plug to appliance first (as applicable) then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- To protect against electrical shock DO NOT immerse cord or plugs in water or other liquid.
- DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
- The supply cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer power-supply cord or extension cord is used:
 - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - c. The cord set or extension cord should be a grounding-type 3-wire cord.
- Outdoor extension cords should be used with outdoor use appliances and are surface marked with the suffix letter "W" and with a tag stating "Suitable for use with outdoor appliances."
- The connection to an extension cord should be kept dry and off the ground.

⚠ CAUTION



Accessible parts may become hot during use. Keep young children away.

THIS APPLIANCE IS SUITABLE FOR OUTDOOR USE

- For household use only.
- Store appliance indoors when not in use, out of the reach of children.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they DO NOT play with the appliance.
- Any other servicing should be performed by an authorized service representative.
- **⚠ WARNING:** Charcoal or similar combustible fuels must not be used with this appliance.
- DO NOT expose to rain.
- DO NOT use the appliance near combustible materials.
- Reference the **OPERATION INSTRUCTIONS** for additional risks concerning use.

SAVE THESE INSTRUCTIONS



CUSTOMER SUPPORT

CONTACT US

For all questions, inquiries, or customer support, please contact us at:

Imported by: Genesis International Corporation Pty Ltd.
Local Call: +61 8 9248 9822
Email: service@genesiscorp.com.au

SERIAL NUMBER LOCATION

To enable your warranty, you will need to provide your appliance's Serial Number.

The Serial Number can be found on your appliance's Manufacturer Label.

(The Manufacturer Label is a large silver sticker found on the body of your appliance.)

THREE YEAR WARRANTY

North Atlantic Imports, LLC warrants this product against defects in materials and workmanship for a period of three (3) years from the original date of purchase under normal use. To the extent any such defects occur, North Atlantic Imports, LLC, in its discretion, will provide the appropriate replacement part(s) at no charge.

In no event shall North Atlantic Imports, LLC be liable for consequential, indirect or incidental damages resulting from the installation, use or failure of the product.

This warranty DOES NOT cover:

- Inspection costs or labor for replacement of any defective part(s);
- Cosmetic defects which DO NOT affect product performance or integrity;
- Normal wear and tear;
- Damage due to vandalism; acts of nature, including but not limited to wind, storms, hail, floods;
- Improper assembly, installation, or use;
- Discoloration or fading of the finish as a result of exposure to chemicals, spills, pool or salt water;
- Corrosion/ rust.

This product has been designed for safety and quality. Any modifications made to the original product could compromise its structural integrity or function and could lead to product failure or personal injury. As such, modifying this product voids all warranties.

This product is for RESIDENTIAL USE ONLY, and is not for commercial, contract or other non-residential purposes. North Atlantic Imports, LLC disclaims all other representations and warranties of any kind, express or implied.

The warranty applies to the original purchaser and is non-transferable. It does not apply to accessories or parts not supplied with the product, to purchases of display models, or to product that is sold on clearance or "as is". You may, however, have other specific legal rights based on the laws of your specific state or country of residence.

To activate your warranty, register your product at

support@blackstoneproducts.com.au

North Atlantic Imports, LLC reserves the right to change or modify this warranty at any time.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty covers domestic use only and does not apply to commercial applications.

This product may be covered by one or more issued U.S. and/or international patents and may include patent applications pending.

For more information, please visit: BlackstoneProducts.com/patents

Blackstone is a registered trademark of North Atlantic Imports, LLC

 
©2025 North Atlantic Imports. All rights reserved.

Distributed by North Atlantic Imports, LLC 1073 W 1700 N Logan, UT 84321 USA






ASSEMBLY GUIDE

EXPLODED VIEW

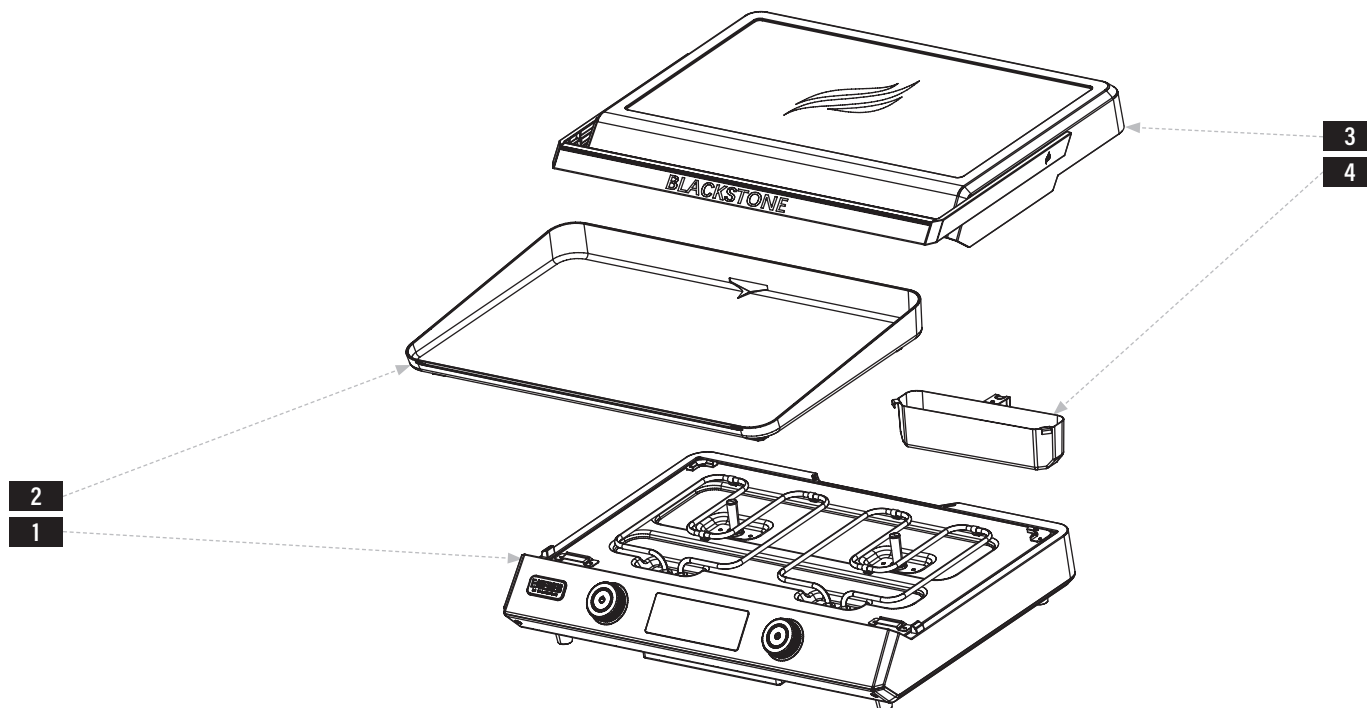

PARTS LIST

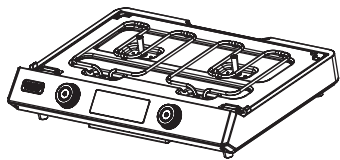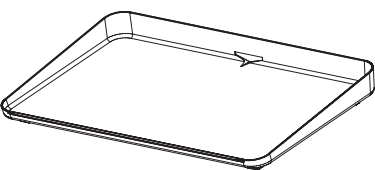   1 Griddle body (1 piece)	2 Griddle top (1 piece)	3 Hood assembly (1 piece)	4 Grease cup (1 piece)
			

ASSEMBLY INSTRUCTIONS

Find a large, clean area to assemble your appliance.

 
Remove all packing material before assembling. (You may have additional or spare hardware after assembly.)

⚠ CAUTION

Sharp edges. Wear gloves while assembling.


STEP 01 Before installing the griddle top on the griddle body, remove the notice label on the griddle body.

Hang the grease cup in the slots on the back of the griddle body.

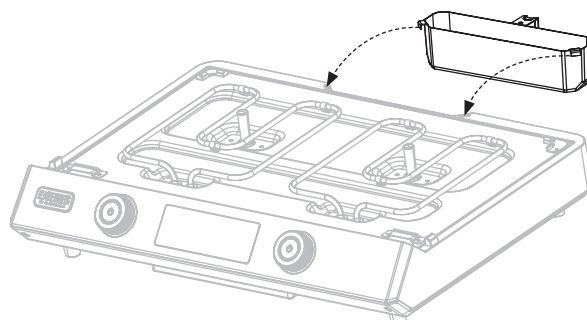




 
STEP 02 Place the griddle top on the griddle body. Slide the griddle top forward so that the front feet lock into the front brackets, and the back feet rest against the back brackets.

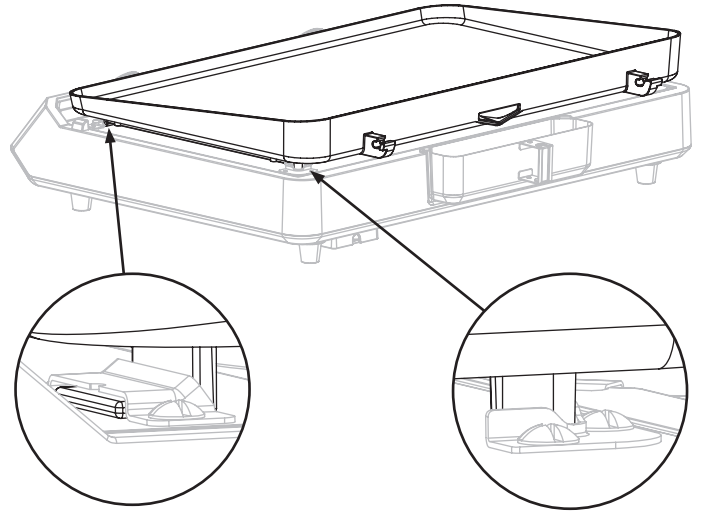

 STEP 03 Place the hood on the griddle top. Insert the hood hinges into the griddle top brackets.

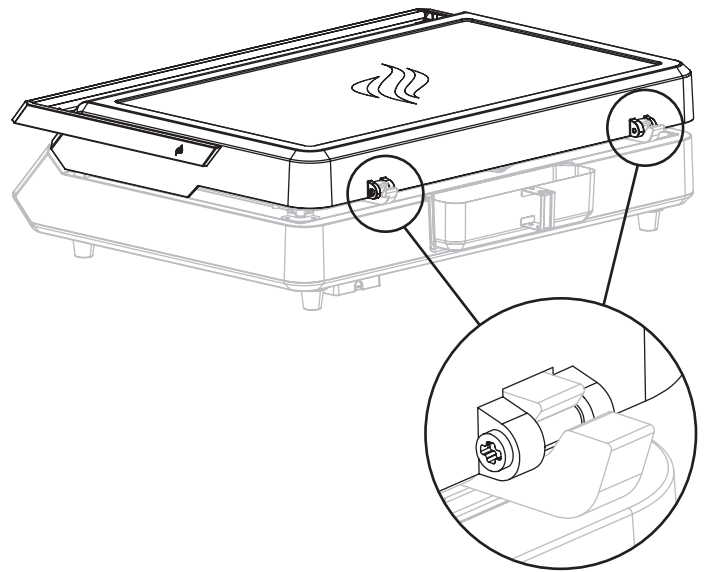

 STEP 04 Proceed to the **OPERATION INSTRUCTIONS**.

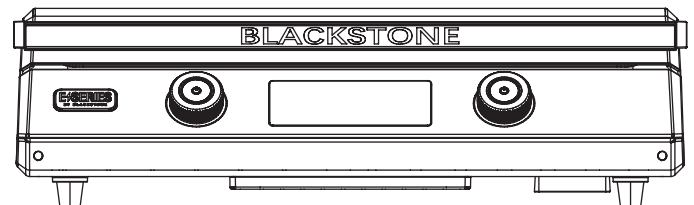



OPERATION INSTRUCTIONS

PROTECTING THE NON-STICK SURFACE

- You **DO NOT** need to season the griddle top.
- **DO NOT** cut directly on the griddle surface.
- Only use silicone coated cooking utensils on the cooking surface.
- Cooking spray containing lecithin will degrade the non-stick coating. We recommend using regular cooking oil in a spray bottle.

WASHING YOUR GRIDDLE TOP

WASH GRIDDLE SURFACE BEFORE INITIAL USE.

- **DO NOT** allow the electric components to come in contact with water. (if applicable)
- **DO NOT** leave water on the griddle surface for more than two hours.
- **DO NOT** wash the griddle top in the dishwasher.
- Avoid using anything that may scratch the surface, including metal scouring pads and abrasive cleaners.

DAILY CLEANING:

STEP 01 Be sure that the grease cup is in place.

STEP 02 Wipe off griddle surface with a moist, soapy cloth or paper towel.

STEP 03 Wash off soap and dry.

EMPTY YOUR GREASE CUP

The grease cup must be removed and emptied after each use.

CAUTION

Grease cup will be hot during and after use. **DO NOT** remove the grease cup until the griddle has completely cooled.

DEEP CLEANING:

STEP 01 Be sure that the grease cup is in place.

STEP 02 Turn heat to low.

STEP 03 While wearing rubber gloves, use one (1) tablespoon of mild soap per one (1) cup of hot water, and wipe down the griddle surface with a cloth or non-metal cleaning pad.

STEP 04 Turn off griddle, and once cool, wipe off surface with a moist, soapy cloth or paper towel.

STEP 05 Wash off soap and dry.

IGNITION INSTRUCTIONS

TO TURN THE GRIDDLE ON:

 
STEP 01 ① Press and hold the control knob button to bring up the temperature measurement preferences. Turn the knob to select Fahrenheit or Celsius. Press the control knob to select.

Turn the control knob until the ② **SET TEMP** displays the desired temperature.

Press the control knob to set the temperature.

STEP 02 When the ③ **ZONE TEMP** dash indicators reach the orange area, the griddle has reached the set temperature.

For best results, allow griddle to heat up until all bars are illuminated.

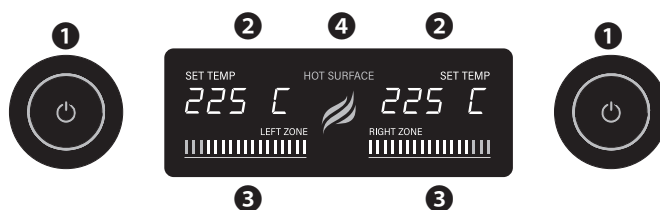


TO TURN THE GRIDDLE OFF:

STEP 01 ① Press and hold the control knob button until the temperature image disappears.

STEP 02 Unplug the appliance.

 STEP 03 **DO NOT** store the appliance until the ④ **HOT SURFACE** indicator has turned off.

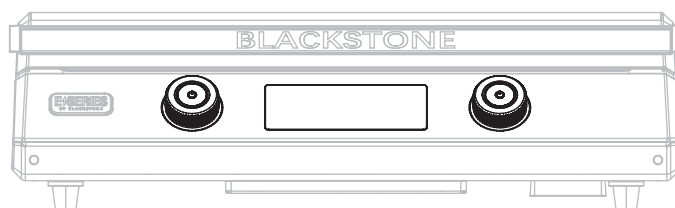

**⚠ CAUTION**

This appliance will be hot during and after use. Use long-handled utensils and oven mitts/ protective gloves when handling potentially hot parts to protect against burns and splatters.

RECIPES AND COOKING TIPS

BlackstoneProducts.com/recipes

 
youtube.com/BlackstoneGriddles

@blackstoneproducts



**STRAWBERRIES AND CREAM
PANCAKES**
Breakfast

OKLAHOMA FRIED ONION BURGER
Lunch

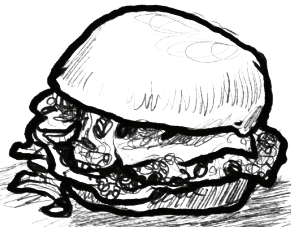

TACOS BORRACHOS
Dinner

