


Requirements for Docking Station Installation

Surface Requirements



Note: A tile band is commonly found in the recommended installation area and is suitable if the tiles are securely fixed.

*Avoid pebble surfaces, as loose beads may affect adhesion. If the pebbles are small and firmly set, installation may still be possible.

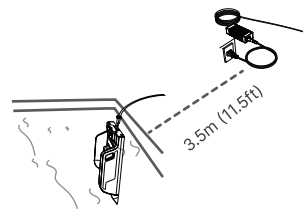


The installation area must be level with the pool wall to ensure optimal docking performance.

Note: The Power Adaptor needs to be installed into a (GFI) Power outlet at least 3.5m away from the pool.


Location Requirements

For best underwater communication, install in an open area with a clear view of the entire pool and within 2.4 GHz Wi-Fi range. A Wi-Fi extender may be required if coverage is limited.

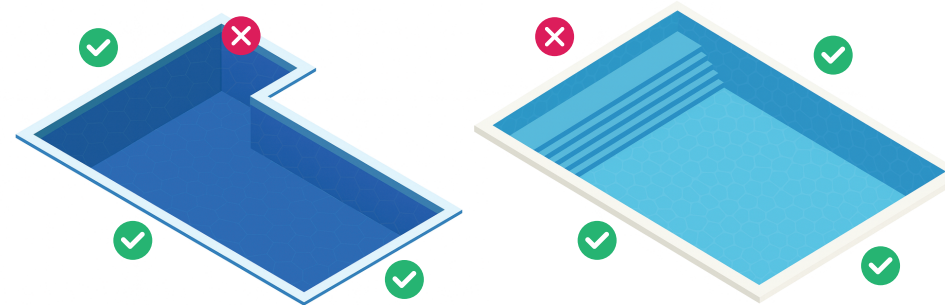

Free from obstructions and not installed above stairs or objects that will impede the docking process.

Dock Placement Requirements

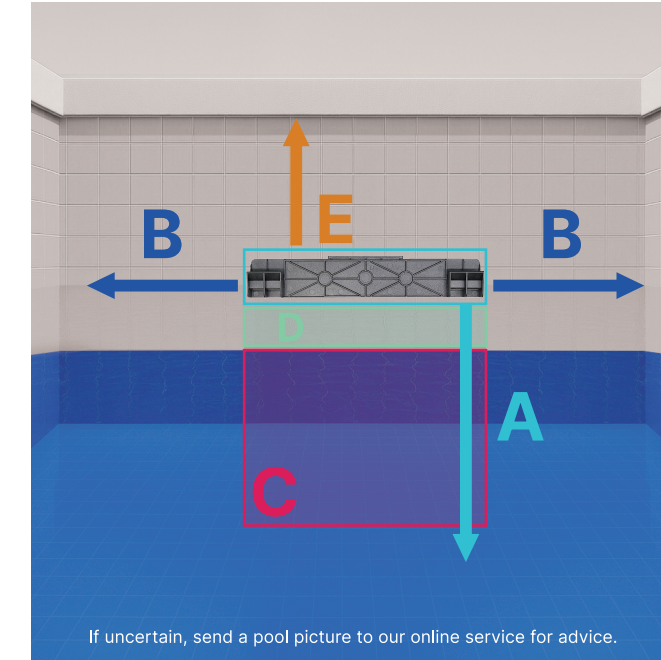

A: Wall hook should be installed a minimum of 1.2 m above the pool floor.

B: Installed 1 m from other pool walls.


C: Ensure there are no obstructions below the dock e.g.: steps/shelves, lights or pool returns.

D: Wall hook must be installed 20 mm above pool water level (e.g.: 20 mm above midway on skimmer box).

E: Best practice is to install the hook 100 mm below the pool coping for easy access to the buttons and optimal Wi-Fi performance.


Warning: Allow 48 hours after installing the wall hook before attaching the dock to ensure the fixture is fully secure.

How to use the Pozie Tide Pro cordless robotic cleaner and docking station.

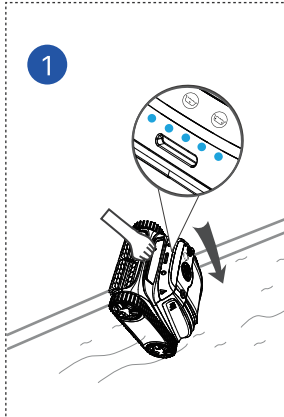


NOTE: Before putting the cleaner into the pool, Remove hook and additional filters from inside the debris basket (step 6)


Turn the Tide Pro on and place it into the pool.

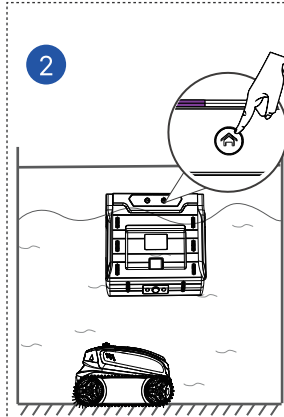


Push the home button on the dock.

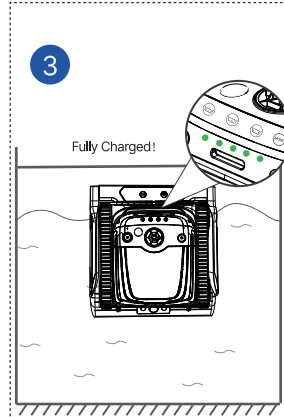


The robot will dock automatically and begin charging.

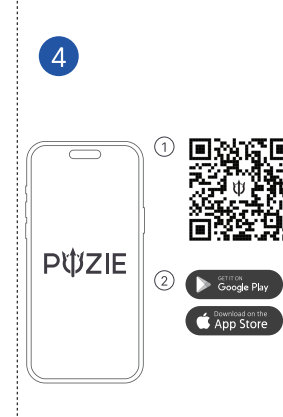

Download the Pozie Robots App and create an account. Allow Wi-Fi and Bluetooth connections for the robot.

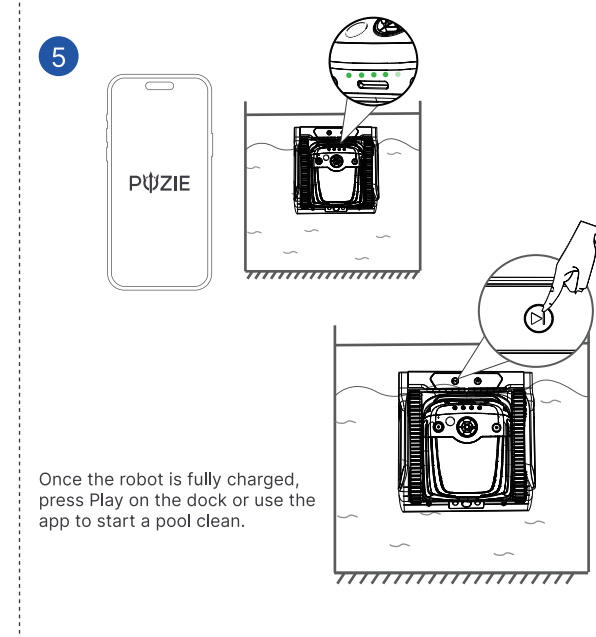


Once the robot is fully charged, press Play on the dock or use the app to start a pool clean.

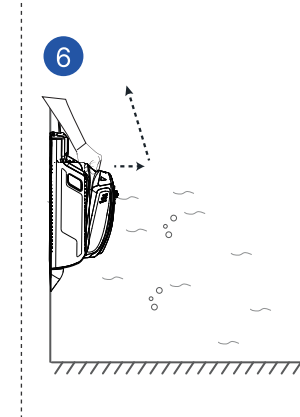

To clean the robot call it home and lift it out using the handle.

Note: If the robot is too full, it may not dock correctly. In this case, use the included hook to retrieve it.

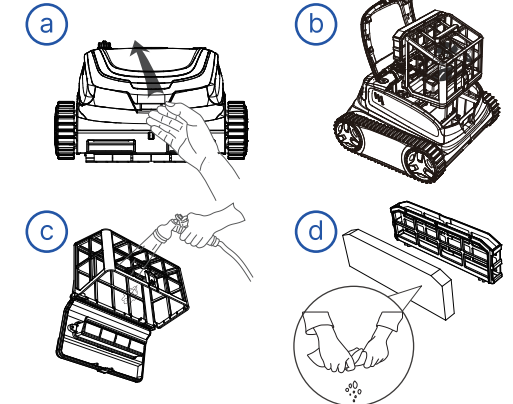

- a) Open the back of the robot
- b) Take out both fine filter and debris basket
- c) Rinse out basket with tap water
- d) Squeeze excess water from fine filter.

Note: This is a consumable part